

front




4200 SERIES VERTICAL TYPE PANIC EXIT DEVICE


Installation instructions for changing lever handing

CAUTION:


The preset lever handle is "LHR".
Please follow the steps below if "RHR" is needed.

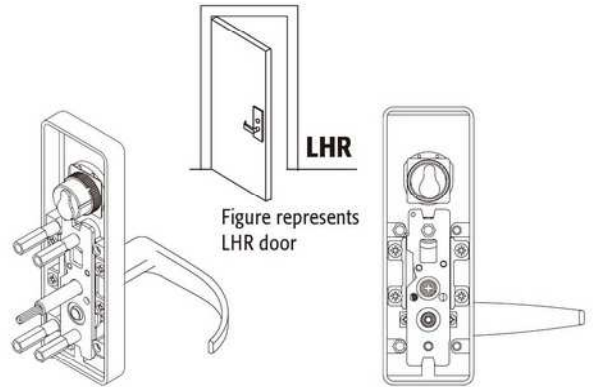

- ① **REQUIRED:**
Handle must be attached before loosening mounting studs.

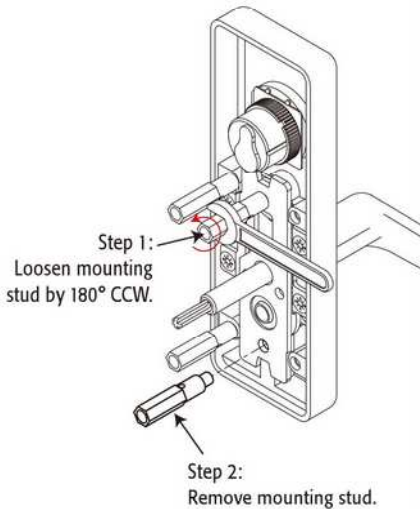

- ②
- Step 3:
- Step 4:
Pull spindle slightly up and rotate it to the required position as shown in the figure.

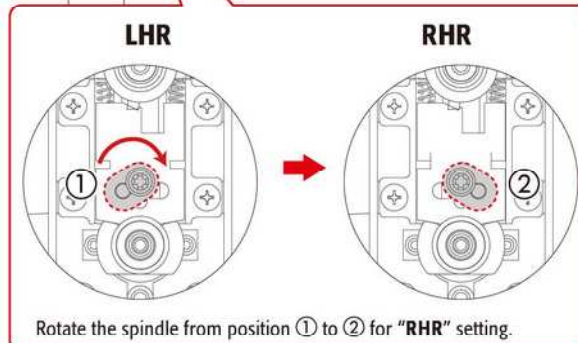

- ③
- Step 5:
Push backplate back after step 4.

- ④
- Step 6:
Re-install and tighten mounting studs by hex wrench.

- ⑤
- A
- Step 7:
Remove set screw by hex wrench.
- Step 8:
Place lever in reverse direction.

- B
- Step 9:
Put the reversed handle back.
- Step 10:
Tighten set screw by hex wrench.

- ⑥
- A
- B
- Step 11:
Remove mounting studs to indicated position.
- Re-install and tighten mounting studs.

- ⑦ The setting for switching handle direction is completed.
- RHR






4200 SERIES RIM TYPE PANIC EXIT DEVICE

Installation instructions for changing lever handing

CAUTION:

The preset lever handle is "LHR".
Please follow the steps below if "RHR" is needed.

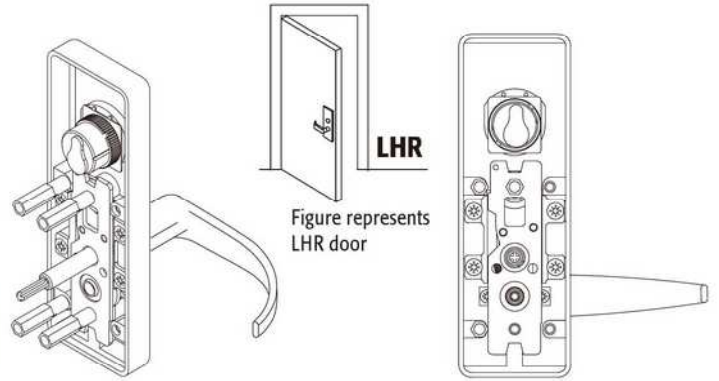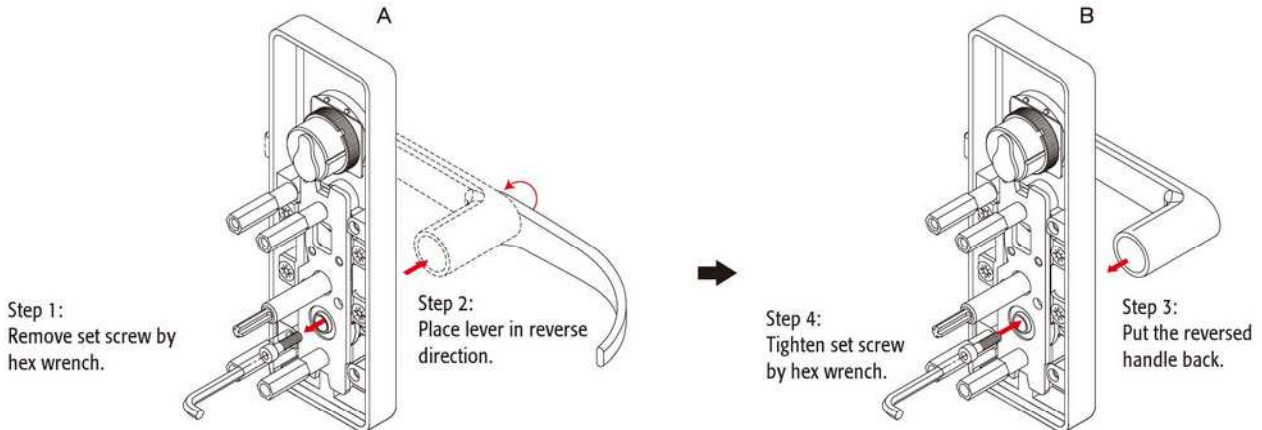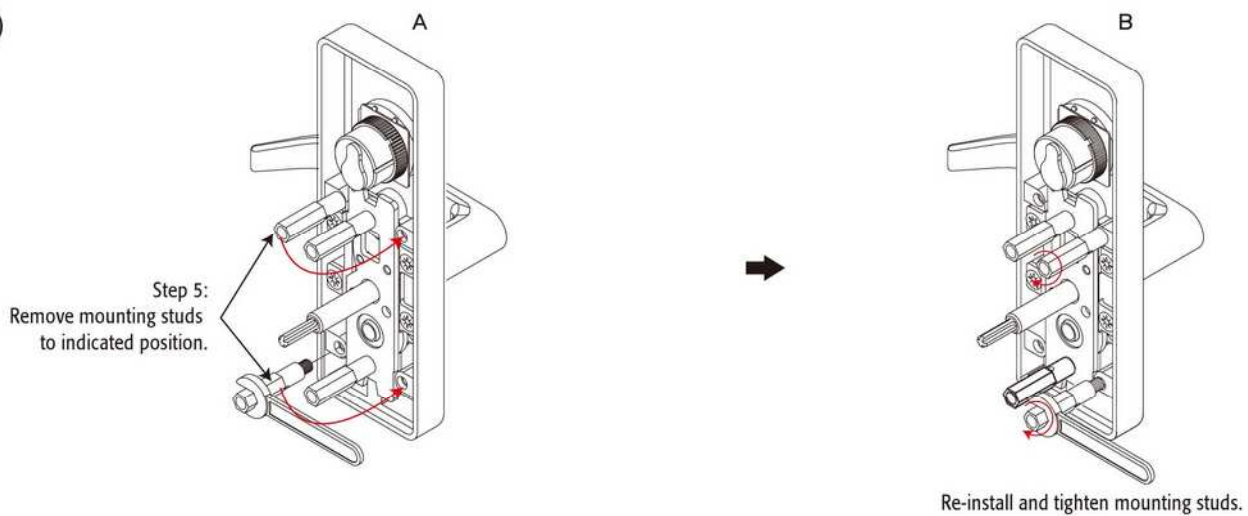
①

②

③

The setting for switching handle direction is completed.

