

COM-CB2000-BLK Surface Bolt



Traditional Sliding Bolt with an Innovative Twist!






Easy Installation (Tools Required - Drill and Screwdriver)

Recessed Mounting

1. Position the Strike Plate in its intended position. The 5/8" cutout in the Strike Plate must be over a recess in the door frame.
2. Mark the positions for the screws on the mounting surface.
3. Drill pilot holes for the screws.
4. Screw the Strike Plate into place with the included One-Way Screws.
5. Complete steps 1 thru 3 for Flush Mounting.

Flush Mounting

1. Hold the Combi-Bolt in its intended position, then mark the positions for the screws on the mounting surface.
2. Drill pilot holes for the screws.
3. Screw the Combi-Bolt into place using the included One-Way Screws.
4. Install the Bolt Receiver. Before screwing in the One-Way Screws, be certain the Bolt slides smoothly into the Bolt Receiver.

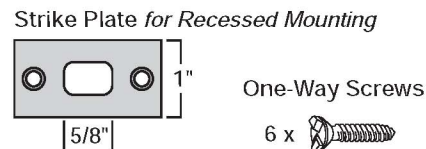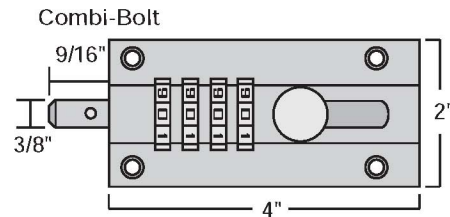

Set Your Combination (Factory Default Combination: 0-0-0-0)

1. Set dials to the current combination.
2. Lift the handle up and then slide the bolt back completely.
3. Set the dials to the new combination & make a note of it.
4. Lift the handle up and slide the bolt forward completely.

