



AUXILIARY DEADBOLT INSTALLATION TEMPLATE

DEADBOLT ASSEMBLY

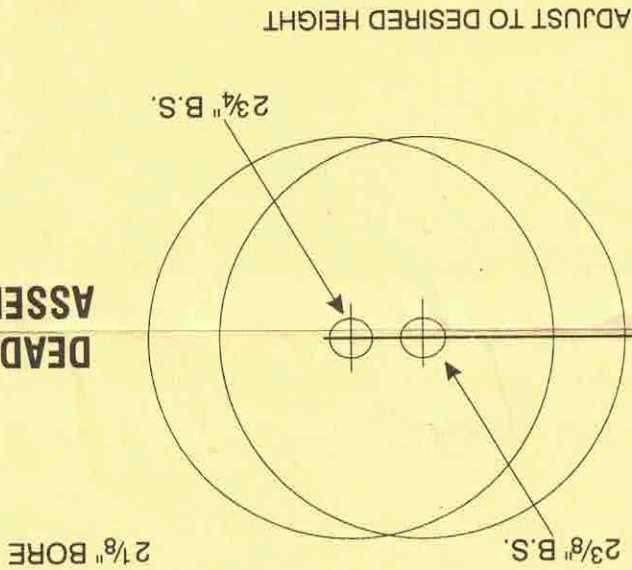

ADJUST TO DESIRED HEIGHT

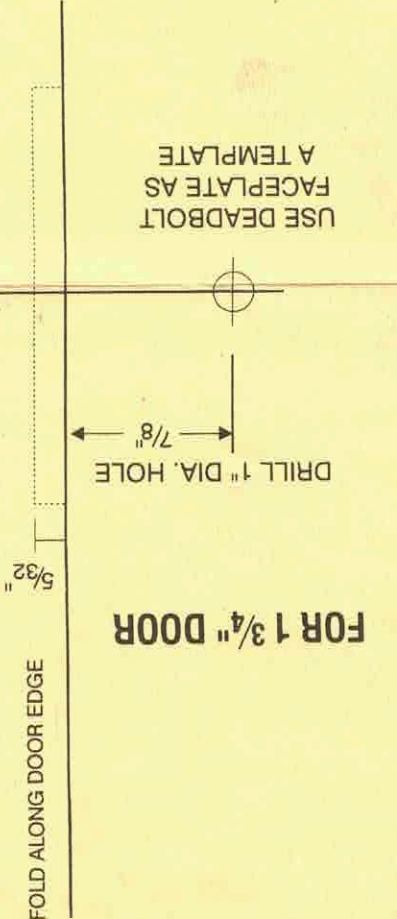

INSTALLATION INSTRUCTIONS

<p>1 MARK HOLES Using enclosed template, mark door as illustrated at desired lock height.</p> <p>Mark Center for 1" Hole Mark Center for 2 1/8" Hole</p>	<p>2 BORE TWO HOLES A. Bore 2 1/8" hole from one until point of drill breaks through. Then complete hole from other side. This prevents splintering. B. Bore 1" hole from edge of door. (See Template)</p> <p>Bore 2 1/8" Hole First (will also fit 1 1/8" hole) Bore 1" Hole Second</p>	<p>3 MORTISE FOR FRONT Mortise (recess) for front 3/32" deep on edge of door. Use front as template.</p>
<p>4 A. Install cylinder housing assembly into large hole in door. Bolt Housing Cylinder Housing Top Arrow (2) Cyl. Housing Screws</p> <p>B. Insert bolt housing into 1" hole thru cylinder housing. C. Screw in (2) cylinder housing screws (1" long) into lower cylinder housing holes marked "A".</p>	<p>5 A. Assemble cylinder and wave washer into cylinder rose. Cylinder Rose Wave Washer Cylinder</p> <p>B. Insert key in cylinder. Pull key back One Notch. C. NOTE: Include cylinder ring for 1 3/8" thick doors ONLY.</p>	<p>6 A. Screw cylinder into housing until it stops. (Use key as wrench). B. Reverse rotation of cylinder at least one turn and until name is "Up".</p>
<p>7 A. Make sure cylinder lines up on door as shown. Allen Wrench</p> <p>B. Insert Allen wrench inside along side of bolt until it engages screw and tighten cylinder set screw.</p>	<p>8 A. Assemble front with screws. B. Insert tailpiece into hub with thumb turn in vertical position. C. Secure with machine screws supplied.</p> <p>NOTE: If thumb turn binds grind end of tailpiece.</p>	<p>9 INSTALL REINFORCER, BOX AND STRIKE A. Shut door, turn key to extend bolt against jam. Bolt will leave an impression on the jam for strike location. Reinforcer Strike Box</p> <p>B. Drill 1" dia. hole thru jam. C. Mortise out for reinforcer & box. D. Drill (2) 9/32" dia. holes thru jam only for (2) 3" long screws.</p>